



JSMS-12L 12" Sliding Single Bevel Mitre Saw

10000836M ~230V 50/60Hz

PARTS LIST

JPW (Tool) AG

Tämperlistrasse 5
CH-8117 Fällanden
Switzerland

Phone +41 44 806 47 48

Fax +41 44 806 47 58

www.jettools.com

P- 10000836M

2015-10

Parts List for JSMS-12L 12" Sliding Single Bevel Mitre Saw

Index No.	Part No.	Description	Size	Qty.
1	JSMS12L-001	Pan Head Machine Screw	M6X25	2
2	JSMS12L-002	Washer	6	10
3	JSMS12L-003	Stock stop (right)		1
4	JSMS12L-004	Right vice worktable		1
5	JSMS12L-005	Set Screw	M6x8	5
6	JSMS12L-006	Lock nut	M6	2
7	JSMS12L-007	Extension rod		4
8	JSMS12L-008	Pan Head Machine Screw	M4x8	4
9	JSMS12L-009	Base		1
10	JSMS12L-010	Set Screw	M10x10	1
11	JSMS12L-011	Compression spring		1
12	JSMS12L-012	Steel ball	Ø8	1
13	JSMS12L-013	Pan Head Machine Screw	M5x12	4
14	JSMS12L-014	Spring washer	5	4
15	JSMS12L-015	Flat washer	5	8
16	JSMS12L-016	Worktable Rotation Scale		1
17	JSMS12L-017	Friction washer		2
18	JSMS12L-018	Depth adjustment knob		3
19	JSMS12L-019	Front angle label		1
20	JSMS12L-020	Foot pad		4
21	JSMS12L-021	Flat washer	10	3
22	JSMS12L-022	Saddle shaped washer	10	1
23	JSMS12L-023	Lock nut	M10	1
24	JSMS12L-024	Left vice worktable		1
25	JSMS12L-025	Stock stop (left)		1
26	JSMS12L-026	Balance bracket		1
27	JSMS12L-027	Cap Head columned Screw	M6x20	1
28	JSMS12L-028	Hex nut	M6	4
29	JSMS12L-029	Cap Head columned Screw	M6x20	1
30	JSMS12L-030	Pressing Plate		1
31	JSMS12L-031	Locking sheet		1
32	JSMS12L-032	Washer	4	16
33	JSMS12L-033	Spring Washer	4	5
34	JSMS12L-034	Pan Head Machine Screw	M4x12	4
35	JSMS12L-035	Shaft		1
36	JSMS12L-036	Handle		1
37	JSMS12L-037	Knob Cover		1
38	JSMS12L-038	Table		1
39	JSMS12L-039	Set Screw	M4x10	5
40	JSMS12L-040	Table Insert		1
41	JSMS12L-041	Worktable Rotation Point		1
42	JSMS12L-042	Socket Head Cap Screw	M6x33	3
43	JSMS12L-043	Hex Cap Screw	M10x55	1
44	JSMS12L-044	Scale		1
45	JSMS12L-045	Clinch Bolt		2
46	JSMS12L-046	Shaft		1
47	JSMS12L-047	Guide Fence		1
48	JSMS12L-048	Knob		2
49	JSMS12L-049	Socket Set Screw	M6x20	1
50	JSMS12L-050	Spring Washer	6	4
51	JSMS12L-051	Socket Head Cap Screw	M6x25	4
52	JSMS12L-052	Fence		1
53	JSMS12L-053	Knob		1
54	JSMS12L-054	Washer		1
55	JSMS12L-055	Spring		1
56	JSMS12L-056	Pin	3x20	1
57	JSMS12L-057	Pin		1
58	JSMS12L-058	Shaft	M4x8	2
59	JSMS12L-059	Clamp		1

Parts List for JSMS-12L 12" Sliding Single Bevel Mitre Saw

Index No.	Part No.	Description	Size	Qty.
60	JSMS12L-060	Set Screw	M4x8	2
61	JSMS12L-061	Carriage Bolt	M6x35	1
62	JSMS12L-062	Pin		1
63	JSMS12L-063	Screw		1
64	JSMS12L-064	Washer	8	5
65	JSMS12L-065	Washer	8	1
66	JSMS12L-066	Plate		1
67	JSMS12L-067	Laser Guard		1
68	JSMS12L-068	Socket Head Cap Screw	M4x16	2
69	JSMS12L-069	Laser		1
70	JSMS12L-070	Laser Base		1
71	JSMS12L-071	Set Screw	M5x6	1
72	JSMS12L-072	Pin	5x14	4
73	JSMS12L-073	Body Support		1
74	JSMS12L-074	Shaft		1
75	JSMS12L-075	Shock Pad		2
76	JSMS12L-076	Cover for Bearing		1
77	JSMS12L-077	Wool Felt		4
78	JSMS12L-078	Sliding Bar		2
79	JSMS12L-079	Bearing		3
80	JSMS12L-080	Angle Point		1
81	JSMS12L-081	Pin		1
82	JSMS12L-082	Support		1
83	JSMS12L-083	Washer	12	1
84	JSMS12L-084	Hex. Nut	M10	1
85	JSMS12L-085	Locking Nut	M12	1
86	JSMS12L-086	Rear Cover		1
87	JSMS12L-087	Locking Shaft		1
88	JSMS12L-088	Locking Sleeve		1
89	JSMS12L-089	Handle		1
90	JSMS12L-090	Spring		1
91	JSMS12L-091	Screw		1
92	JSMS12L-092	Sleeve		1
93	JSMS12L-093	Bearing Sleeve		2
94	JSMS12L-094	Spring		1
95	JSMS12L-095	Knob		1
96	JSMS12L-096	Screw		2
97	JSMS12L-097	Joint Holder		1
98	JSMS12L-098	Hex. Bolt (Left)	M8x20-LH	1
99	JSMS12L-099	Washer	8	1
100	JSMS12L-100	Outside Collar-blade Set		1
101	JSMS12L-101	Blade		1
102	JSMS12L-102	Inside Collar-blade Set		1
103	JSMS12L-103	Carriage Bolt	M5x16	1
104	JSMS12L-104	Guard Support		1
105	JSMS12L-105	Locking Washer		1
106	JSMS12L-106	Roller		1
107	JSMS12L-107	Torque Spring		1
108	JSMS12L-108	Movable guard		1
109	JSMS12L-109	Set Screw	M4x8	4
110	JSMS12L-110	Screw		1
111	JSMS12L-111	Screw		1
112	JSMS12L-112	Fix Plate		1
113	JSMS12L-113	Locking Nut	M5	2
114	JSMS12L-114	Set Screw	M5x10	4

Parts List for JSMS-12L 12" Sliding Single Bevel Mitre Saw

Index No.	Part No.	Description	Size	Qty.
115	JSMS12L-115	Bearing Block		1
116	JSMS12L-116	Shaft		1
117	JSMS12L-117	Key	A5x10	1
118	JSMS12L-118	Bearing	6004	1
119	JSMS12L-119	C-Ring	35	1
120	JSMS12L-120	Sleeve		1
121	JSMS12L-121	Gear		1
122	JSMS12L-122	C-Ring	12	1
123	JSMS12L-123	Bearing		1
124	JSMS12L-124	Nut	M6	1
125	JSMS12L-125	Dust Port		1
126	JSMS12L-126	Dust Bag		1
127	JSMS12L-127	Set Screw	M6x25	1
128	JSMS12L-128	Pan Head Screw	M4x45	1
129	JSMS12L-129	Self-Tapping Screw	ST2.9x9.5	2
130	JSMS12L-130	Body		1
131	JSMS12L-131	Sleeve		2
132	JSMS12L-132	Torque Spring		1
133	JSMS12L-133	Dust Open Plate		1
134	JSMS12L-134	Bearing		1
135	JSMS12L-135	Card Wrench		1
136	JSMS12L-136	Wind Screen		2
137	JSMS12L-137	Armature		1
138	JSMS12L-138	Pan Head Screw	M5x60	2
139	JSMS12L-139	Stator		1
140	JSMS12L-140	Bearing	6202	1
141	JSMS12L-141	Rubber Ring		2
142	JSMS12L-142	Handle		1
143	JSMS12L-143	Handle Upper Cover		1
144	JSMS12L-144	Switch		1
145	JSMS12L-145	Pan Head Screw	M4x16	2
146	JSMS12L-146	Laser Switch		1
147	JSMS12L-147	Self-Tapping Screw	ST4.2x32	2
148	JSMS12L-148	Pan Head Screw	M4x30	2
149	JSMS12L-149	Power Cord		1
150	JSMS12L-150	Protecting Brush		1
151	JSMS12L-151	Self-Tapping Screw	ST4.2x13	8
152	JSMS12L-152	Clamp		1
153	JSMS12L-153	Terminal board		1
154	JSMS12L-154	Transformer		1
155	JSMS12L-155	Switch		1
156	JSMS12L-156	Handle Down Cover		1
157	JSMS12L-157	Pan Head Screw	M5x35	4
158	JSMS12L-158	Brush Holder Cover		2
159	JSMS12L-159	Brush		2
160	JSMS12L-160	Brush Holder		2
161	JSMS12L-161	Self-Tapping Screw	ST4.2x8	2
162	JSMS12L-162	Motor Rear Cover		1
163	JSMS12L-163	Motor Housing		1
164	JSMS12L-164	Pan Head Screw	M4x10	4
165	JSMS12L-165	Flat Washer	4	1
166	JSMS12L-166	Disc, Hold Down		1
167	JSMS12L-167	Stud, Hold Down A		1
168	JSMS12L-168	Arm, Hold Down		1

Parts List for JSMS-12L 12" Sliding Single Bevel Mitre Saw

Index No.	Part No.	Description	Size	Qty.
169	JSMS12L-169	Stud, Hold Down B		1
170	JSMS12L-170	Knob		1
171	JSMS12L-171	Spring		1
172	JSMS12L-172	Shaft		1
173	JSMS12L-173	Safety Plate		1
174	JSMS12L-174	Fix plate		1
175	JSMS12L-175	Torque Spring		1
176	JSMS12L-176	Screw		1
177	JSMS12L-177	Scale for Fence		1
178	JSMS12L-178	Bearing Cover Rear		1
179	JSMS12L-179	JET-92 LOGO		1
180	JSMS12L-180	Harness		1
181	JSMS12L-181	Clamp		2

Wiring Diagram for JSMS-12L 12" Sliding Single Bevel Mitre Saw

10000790M..... ~ 230V, 50/60Hz

